


Olympus Recorders

To use:

1. Hold down the power button until it turns on
2. Push the folder button until the screen says “talk” to record.
3. Push the record toggle switch (under the power button) **up** to start recording
4. Push the record toggle switch **down** to stop recording
5. Use the fast forward button to scroll through the recordings to choose what to listen to
6. Press play when you find the recording you would like
7. Use the trash can icon to delete any recordings you do not need

To save to a computer

1. Plug the USB cable into the recorder and USB drive of a computer
2. Click Start → Documents → Recorder
3. Choose the Talk folder
4. Choose the recording you want to listen to
5. Rename the recording if you choose to do so

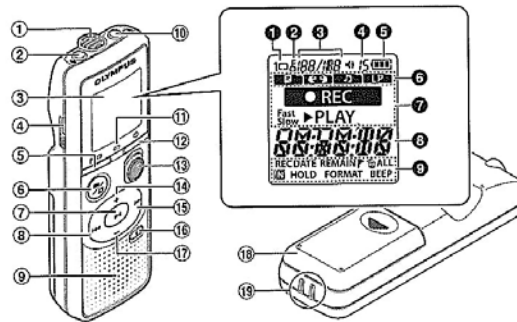

Names of parts

Recorder

- 1 Built-in microphone
- 2 (microphone) jack
- 3 Display
- 4 USB connector
- 5 P/□ (index/repeat) button
- 6 ■/□ (recording scene, folder/ noise cancel) button
- 7 ►|| (playback, pause) button
- 8 ◀◀ button
- 9 Built-in speaker
- 10 (earphone) jack
- 11 LED indicator light
- 12 ⏻ (power, hold) button
- 13 REC (record) switch
- 14 + button
- 15 ►► button

17 - button

18 Battery cover

19 Straphole

Display

- 1 Repeat
- 2 File lock
- 3 File number/Total number of recorded files in folder, A/B repeat
- 4 Volume
- 5 Battery
- 6 Folder (recording scene)
- 7 Voice recorder status (recording, playback, fast playback, slow playback)
- 8 Time and date, Recording scene
- 9 Indicator display area (recording date, time and date, remain, index/ temp mark, erase, noise cancel, hold, format, beep)